

## SIZING AND CONFIGURATION:

Arm Envelope: To size the arm envelope, measure elbow crease to base of index finger.

ARM SLING SIZE	MEASUREMENT
S/M	10.5"-15" (26.7cm-38.1cm)
L/XL	15+" (38.1+cm)

Arm envelope is shipped in L/XL configuration. To adjust arm envelope to the S/M size, unbuckle both quick release buckles. Fold in arm envelope and adhere hook and loop tabs on inside of envelope.