


One Link Installation

WHAT'S IN THE BOX

Flange Bolt One Link Cap with O-Ring
One Link Nut Instructions

1. Insert the flange bolt through the flexible socket and One Link hole. Apply Loctite® Threadlocker Blue 242® (or equivalent) to the flange bolt.

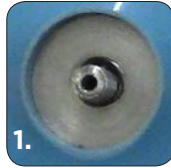

2. Using a 7 mm socket, install the One Link Nut onto the flange bolt. Tighten to 25 in lb.



Do not over-tighten.

Sand down the flange bolt if necessary so that it is flush with the One Link Nut.



3. Screw on the One Link Cap with O-Ring.

WillowWood®

The Ohio Willow Wood Company
15441 Scioto Darby Road
Mt. Sterling, OH 43143
phone 740.869.3377 / 800.848.4930
fax 740.869.4374 www.willowwoodco.com



Ohio Willow Wood Company
Keizersgracht 62/64
1015 CS Amsterdam
The Netherlands



PN-2507-B 08 MAR 2017