
How to measure your thumb for a **RhizoLoc**® thumb brace.

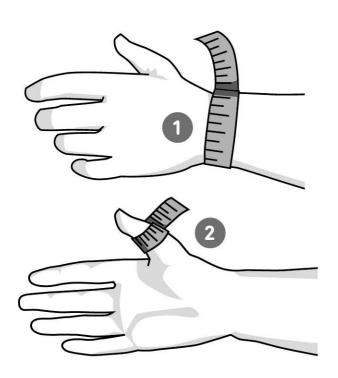

Measure the wrist at the narrowest point and measure the middle of the thumb below the joint.

Size	1 Circumference (inch)	2 Circumference (inch)
1	4 3/4-6 1/4	1 3/4 - 2 3/4
2	6 1/4-7 3/4	2 ½-3 ½