



HOW TO MEASURE Transfemoral Liner

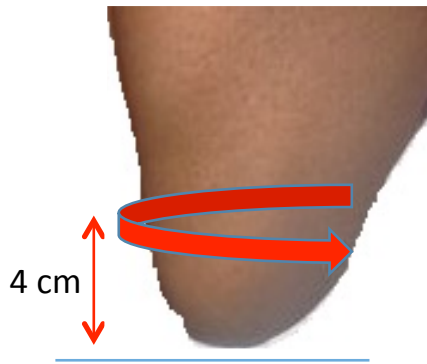

1. Measure the circumference of the residual limb at 4cm from the distal end
2. Choose the liner size, which corresponds to the measurement or one smaller.
3. Never choose a liner size, which is larger than the measurement

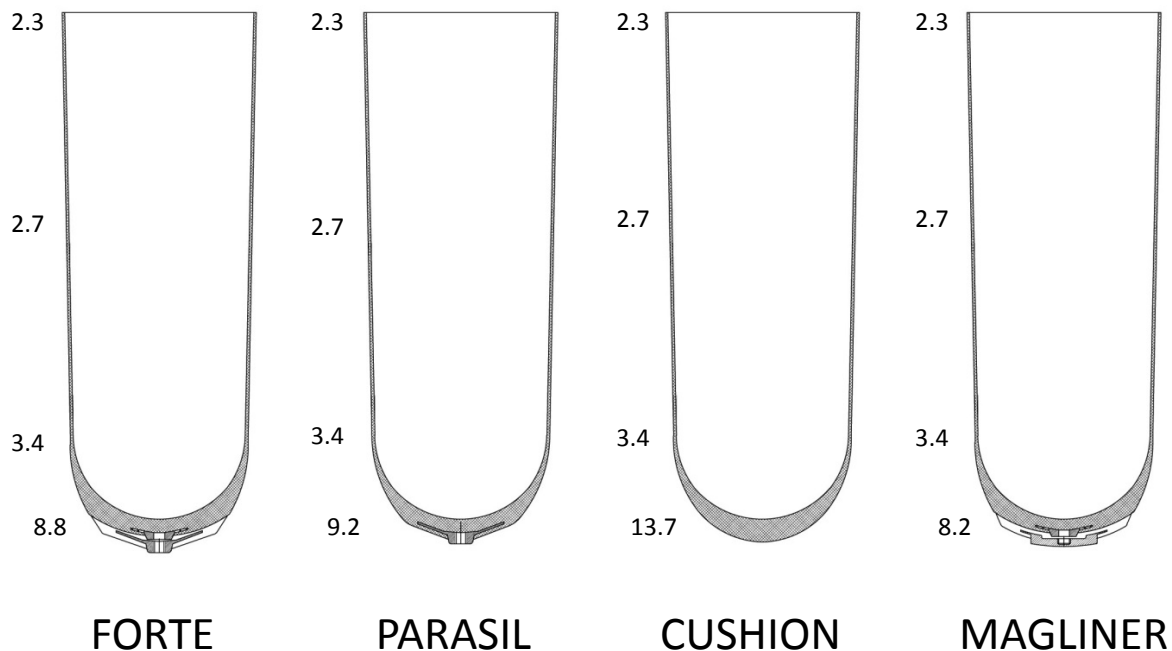


AK LINERS

WALL AVERAGES

HOW TO MEASURE Transtibial Liner



1. Measure the circumference of the residual limb at 4cm from the distal end
2. Choose the liner size, which corresponds to the measurement or one smaller.
3. Never choose a liner size, which is larger than the measurement

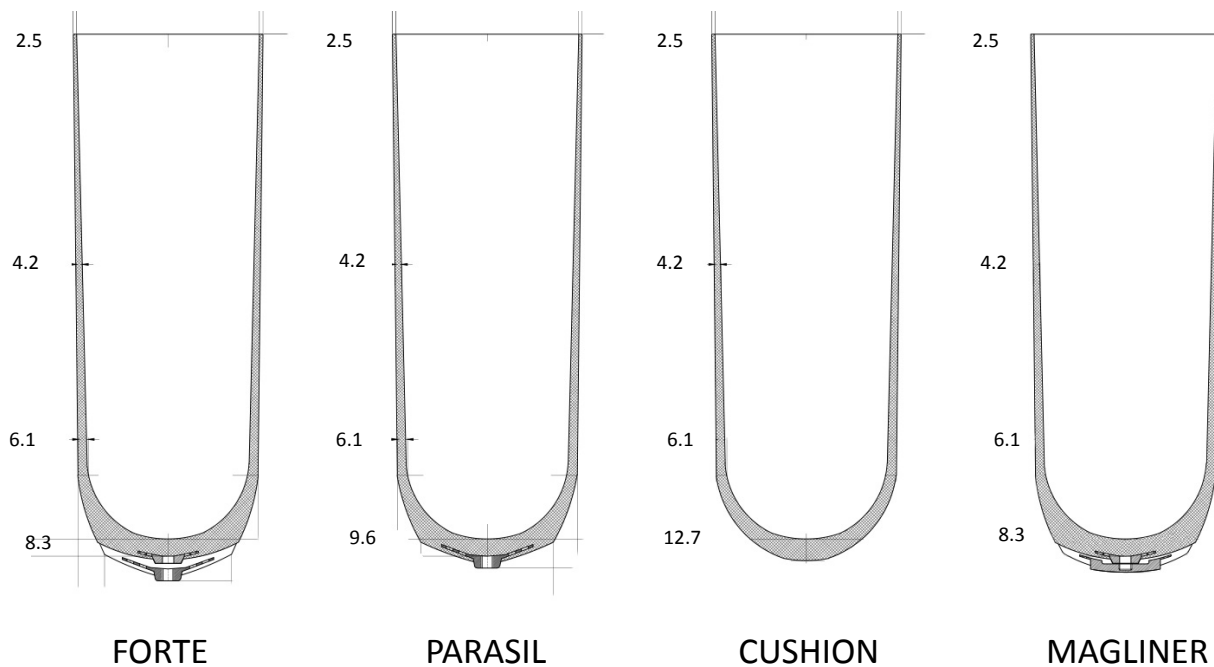

BK LINERS

WALL AVERAGES