




QuickFit™ Lacer by CLICK

Size: Large
Releasing Lacer
OK0165-230



CLICK
MEDICAL

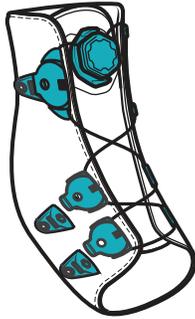

For help and video instructions, visit clickmedical.co/quickfit-lacer

WARRANTY


clickmedical.co/terms/#warranty

US customers contact
Click Medical directly:
Help@ClickMedical.co
Help Line: +1.970.670.7012


International customers,
please contact your
local distributor



Cuff Configuration

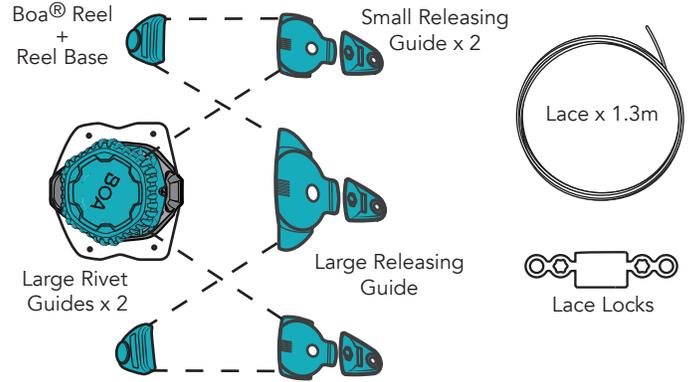

AFO and Boot Configuration

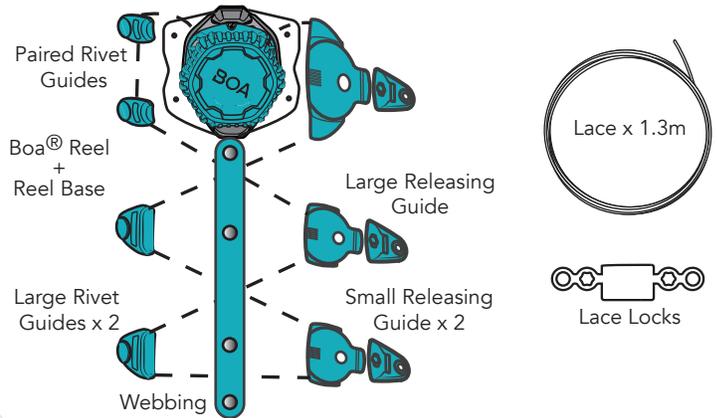

Recommended Tools:

- QuickFit™ Tool TL-001
- QuickFit™ Rivet Pack SP1040
- Scissors
- Marker Pen


Advisory:




Must be installed by a trained professional.
Lace will wear. At minimum, inspect monthly.
Overtightening could reduce circulation.
Do not use on patients with nerve issues.
Keep lace away from sharp edges.
For advisories in other languages, visit clickmedical.co/advisories.

- 1 Determine guide and reel locations using configurations listed above.**

Punch 1/8" holes using the QuickFit tool.

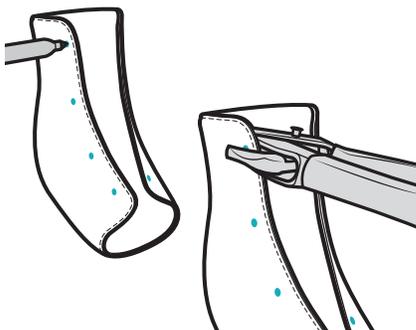


- 2 a. Attach guides, reel base, and webbing by inserting male rivet from inside device.**
b. Apply rivet cap by hand.
c. After verifying fit, permanently set the rivets using the QuickFit tool.

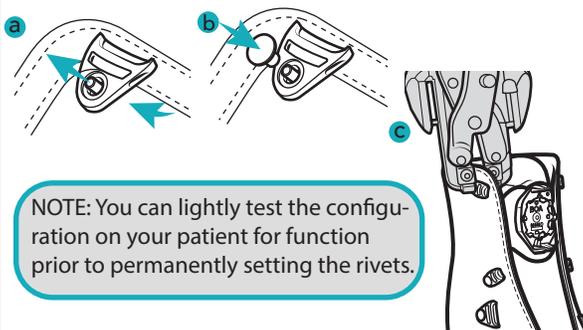


NOTE: You can lightly test the configuration on your patient for function prior to permanently setting the rivets.


- 3 Attach releasing guides to riveted base. Feed lace through all guides and webbing.**

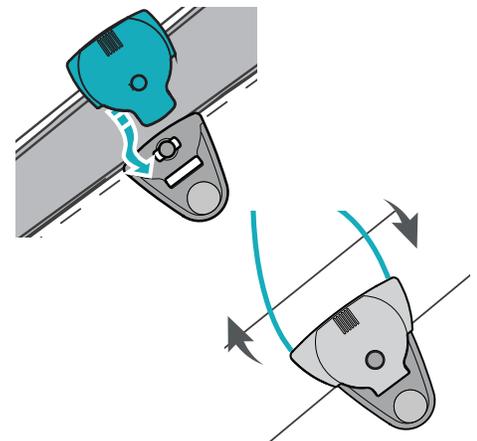


- 4** Check for proper lace feeding through each guide. Then insert plaster model into the device. Pull the laces until tight and measure 10-15cm from the upper guide to the end of the lace. Add 3cm to each lace and cut.

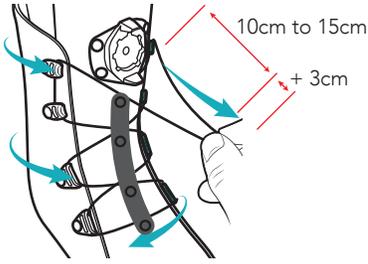


- 5** Press down on reel to ensure it is closed. On back side of reel, twist dial to align arrows.

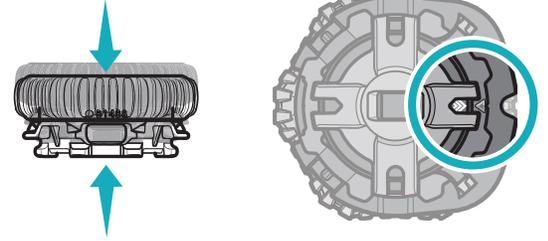


- 6** Feed lace through top exit port and pull through rear cartridge window. Repeat for opposite side lace. Assure lace is correctly inserted in reel.

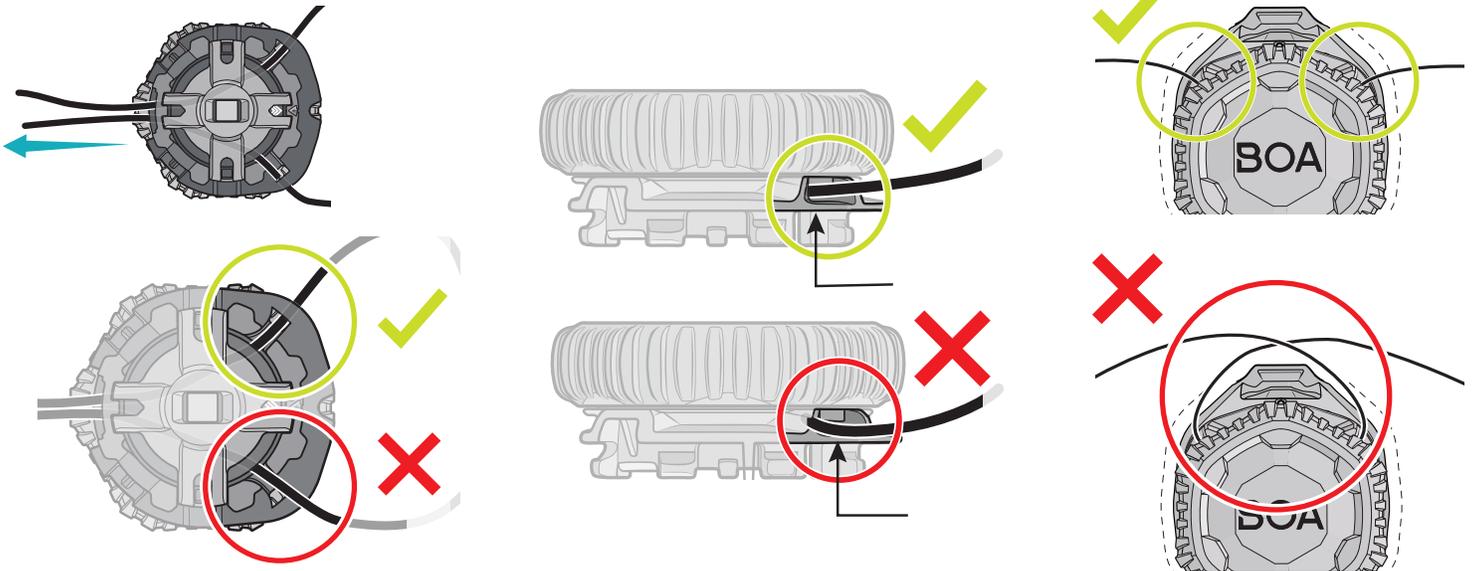


- 7** Hold lace lock with pliers. Push lace through back of hole, then loop around backside and through the second hole. Lace tail should be 2.5-5.0mm.

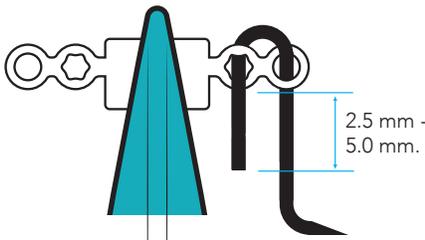


- 8** Pull lace tight to set lace lock. Flex lace lock back and forth to break off connector. Pull lace firmly into reel. Ensure lace lock is not visible. Repeat for opposite lace.

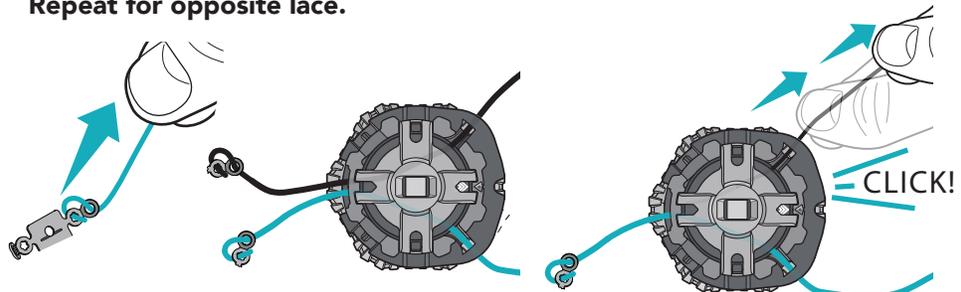

- 9** Insert reel into base by aligning the notch with the #1 on the mounting plate and pushing into place. Then turn reel counter clockwise. The #2 will then be visible. Pull outward on dial to ensure proper installation.

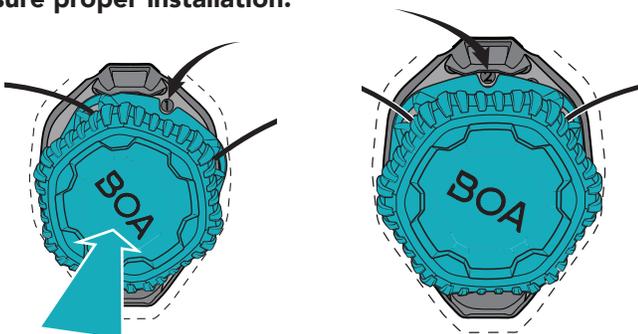

- 10** Cycle system to test function. Push to engage. Twist to tighten. Pull to release.

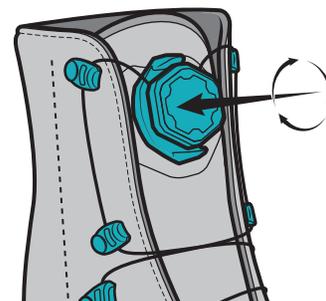

<table border="1"> <tr><td colspan="2">MD</td></tr> <tr><td>EC</td><td>REP</td></tr> </table>		MD		EC	REP	MDSS GmbH. Schiffgraben 41 30175 Hannover Germany	
MD							
EC	REP						
<table border="1"> <tr><td>CH</td><td>REP</td></tr> </table>		CH	REP	MDSS CH GmbH. Laurenzenvorstadt 61 5000 Aarau Switzerland	<table border="1"> <tr><td>UK</td><td>REP</td></tr> </table>	UK	REP
CH	REP						
UK	REP						
		Click Medical, LLC 1205 Hilltop Parkway, W101 Steamboat Springs, CO, 80487, USA • 1-970-670-7012					