

Elbows

E-400 Elbow

HOSMER


- Eight to eleven locking positions and accommodates lift assist unit on left or right side
- Heavy duty saddle straps for the E-400 available on special order
- Supplied with caucasian elbow cap unless otherwise specified

- 50650** E-400 Standard Size Elbow, *Outside Cable Exit, 11 Locking Positions, 2-13/16" (7.1 cm) Diameter; 2-1/8" (5.4 cm) Elbow Axis to Socket End, 15 oz. (420 g)*
- 50651** E-400A, *Same as 50650 with Inside Cable Exit, 11 Locking Positions*
- 61658** E-400HD-A Standard Size Elbow, *Inside Cable Exit, 8 Locking Positions, Heavy Duty Saddle and Gear Sector, 15 oz. (420 g)*
- 50653** E-400HD Standard Size Elbow; *Outside Cable Exit, 8 Locking Positions, Heavy Duty Saddle and Gear Sector; 15 oz. (420 g)*
- 60149** E-400XHD: Standard Size Elbow; *Outside Cable Exit, 8-Locking Positions, Extra Heavy Duty Gear Sector, Heavy Duty Saddle; 17 oz. (480 g)*
- 60665** Power-Bow: Standard Size Elbow; *Outside Cable Exit, 8-Locking Positions, Stainless Steel Frame, Cam and Reinforced Extra Heavy Duty Gear Sector, Heavy Duty Saddle; 21.2 oz. (597.5 g)*

Includes:

- A. 62441** Short Sleeve
- B. 62440** Long Sleeve
- *C. 62243** Internal Assembly, *E-400 and E-400HD (Part list on next page)*
- 62245** Internal Assembly, *E-400A and E-400HD-A (Part list on next page)*
- D. 50725** Cable Housing Assembly, *E-400, E-400A, E-400HD and Power-Bow*
- 56191** Cable Housing Assembly, *E-400HD-A*
- E. 50667** Lock Nut
- F. 60668** Belleville Washer (2 required)
- G. 50658** Turntable, *E-400, 400HD*
- 50659** Turntable, *E-400A*
- H. 50665** Cork Washer
- I. 50719** Shaft
- J. 50739** Outside Washer (2 required)
- K. 50740** Screw (2 required)
- L. 50724** Cable Assembly, *E-400, E-400HD, E-400XHD and Power-Bow*
- 55705** Cable Assembly, *E-400A and E-400HD-A*
- M. 50729** Washer (2 required)
- N. 62235** Gear Sector, *E-400 and E-400A*
- 62236** Gear Sector, *Heavy Duty for E-400HD-A, E-400HD and E-400XHD*
- 62237** Gear Sector, *Extra Heavy Duty for E-400XHD and Power-Bow*
- O. 50748** Yoke Assembly, *E-400, E-400A, E-400HD-A and E-400HD (Parts list on next page)*
- 60143** Yoke Assembly, *E-400XHD*
- 60664** Yoke Assembly, *Power-Bow*
- P. 50730** Elbow Saddle Assembly, *E-400 and E-400A*
- 50738** Elbow Saddle Assembly, *E-400HD-A, E-400HD, E-400XHD and Power-Bow*

- Q. 50742** Sheet Metal Screw, *E-400, E-400A, E-400HD-A, E-400HD and E-400XHD (4 required)*
- 51057** Sheet Metal Screw, *Power-Bow (4 required)*
- R. 50741** Elbow Cap, *Caucasian, E-400, E-400HD*
- 54419** Elbow Cap, *Dark Brown, E-400*
- 54422** Elbow Cap, *Medium Brown, E-400*
- 54425** Elbow Cap, *Light Brown, E-400*
- 53926** Elbow Cap, *Caucasian, E-400A*
- 54418** Elbow Cap, *Dark Brown, E-400A*
- 54421** Elbow Cap, *Medium Brown, E-400A*
- 54424** Elbow Cap, *Light Brown, E-400A*
- S. 50427** Anchor
- T. 50747** Hanger
- U. 50680** Bolt
- V. 50678** Screw (4 required)
- W. 50722** Bearing (2 required)

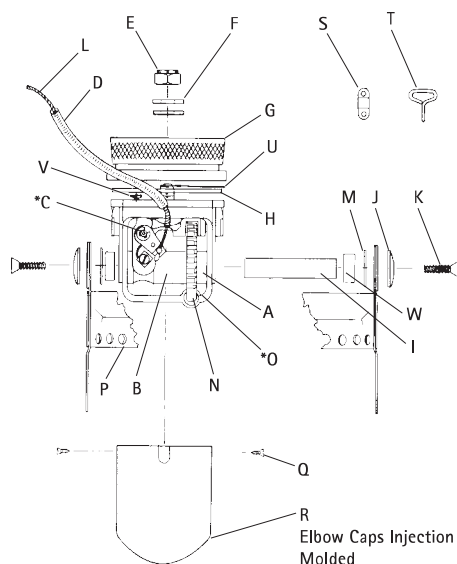

NOTE: See Next Page for Sub Assembly Information