

OMEGA[®] Scanner 3D



User's Guide

Information in this document is subject to change without notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the expressed written consent of The Ohio Willow Wood Company.

© Copyright 2014 The Ohio Willow Wood Company. All rights reserved.

OMEGA® is a registered trademark of The Ohio Willow Wood Company.

Names and examples used in this document are fictitious unless otherwise noted.

Published By
The Ohio Willow Wood Company
Mt. Sterling, Ohio
USA

TABLE OF CONTENTS

Introduction	4
System Requirements.....	5
Hardware	6
Scanner Components	7
Setup	8
Calibration	9
Scanning.....	11
Maintenance.....	13
Technical Specifications.....	14

INTRODUCTION

Highly accurate, portable, and intuitive, the OMEGA Scanner 3D provides a precise, fast method for non-contact prosthetic and orthotic shape capture.

The OMEGA Scanner 3D projects a white light fixed pattern onto the surface to scan. The distortion of the pattern allows the system to determine the position and shape of the surface. When the surface being scanned does not cause sufficient distortion of the light pattern, reflective targets can be applied to the surface to provide additional detail.

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT

This equipment is not intended for sale to the general public and is only provided to trained clinical personnel.

Please do not use conventional disposal methods; return after the end of the product's life to the following address:

WillowWood
15441 Scioto Darby Rd.
Mt. Sterling, OH 43143
USA
740.869.3377

RECOMMENDED SYSTEM REQUIREMENTS


Operating System	Windows 7 (64 bit)
CPU	Core i7 (4+ Cores)
Graphics	NVIDIA Quadro K1000m or greater
Memory	8 GB
Hard Drive	320 GB
Expansion Slot	2.0 USB port
Display	1920 x 1080

HARDWARE

The OMEGA Scanner 3D and all necessary hardware fit into a protective case equipped with a custom foam insert to ensure that every part has its place. The calibration plate is located under the foam insert.



SCANNER COMPONENTS

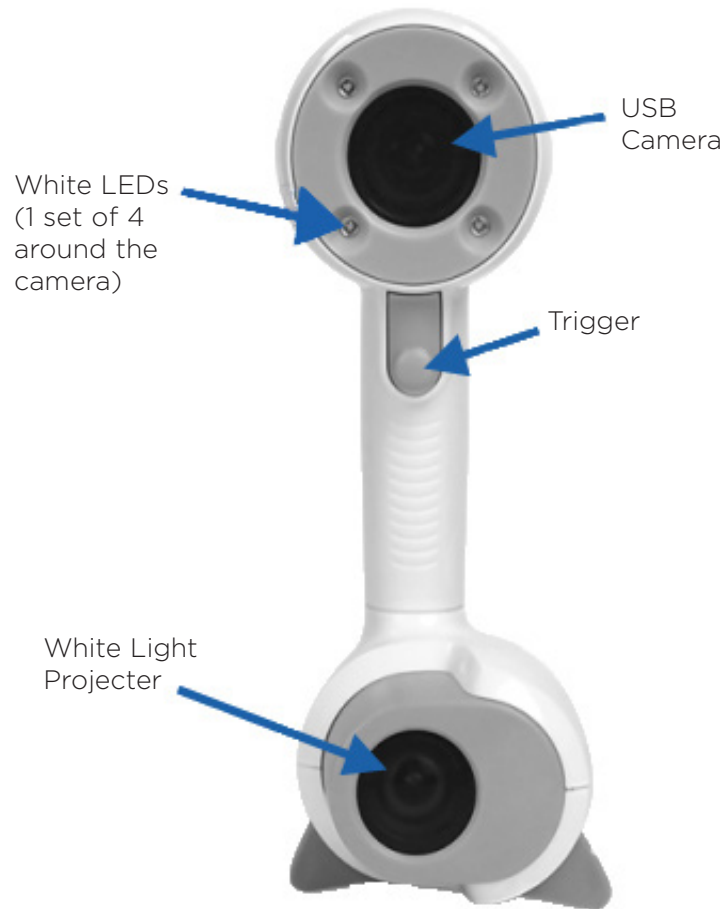

Only WillowWood staff or authorized technicians are authorized to open the scanner or any of its components. Unauthorized opening of the scanner or its components could cause inadvertent damage and will void the warranty. Please contact WillowWood in the event of any trouble or malfunction.

SETUP


Important: DO NOT connect the scanner until Step 3.

1. Plug the power supply in to a wall outlet or power bar. Connect the other end to the USB cable.



2. Plug the USB cable into one of the USB 2.0 ports on the computer.

If you purchased the computer from WillowWood, the correct port will be labeled.

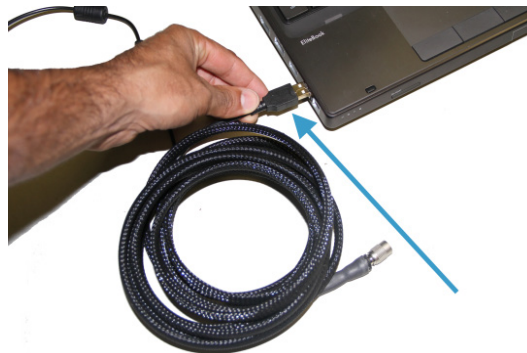

3. Plug the USB cable into the scanner.



After completing a scanning project, unplug the scanner from the USB cable before disconnecting anything else.


CALIBRATION

Changes in the environment such as temperature or pressure variations may modify the Scanner's mechanical configuration. To ensure the quality and accuracy of the data acquired by this high precision equipment, calibration is recommended at the beginning of each scanning session.


Calibration is accomplished using the calibration plate that was included with the Scanner. The calibration plate should be at a temperature close to factory calibration conditions (20-22° C, or 68 - 72° F).

The reflective targets on the calibration plate do not have the same coating as the targets used for scanning. As a result, the calibration targets have a greater sensitivity to exterior contaminants. **If you touch the targets on the calibration plate with your fingers or with any other oily substance, the calibration plate will have to be replaced.**

1. The first step depends on the software you are using:

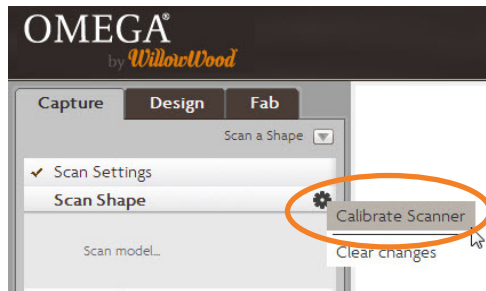


- For OMEGA, click  in the **Scan Shape** step in the Capture Stack, then select **Calibrate Scanner**.


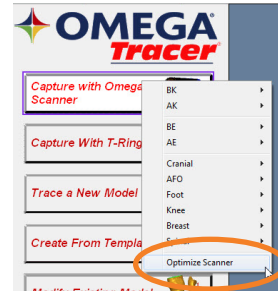


- For Tracer Version 12.2, select **Capture with Omega Scanner** from the Start screen, then click **Optimize Scanner**.

2. When the Scanner Calibration screen appears, click **Acquire**.
3. Lay the calibration plate on a stable and level surface. Make sure that there are no reflective objects nearby.

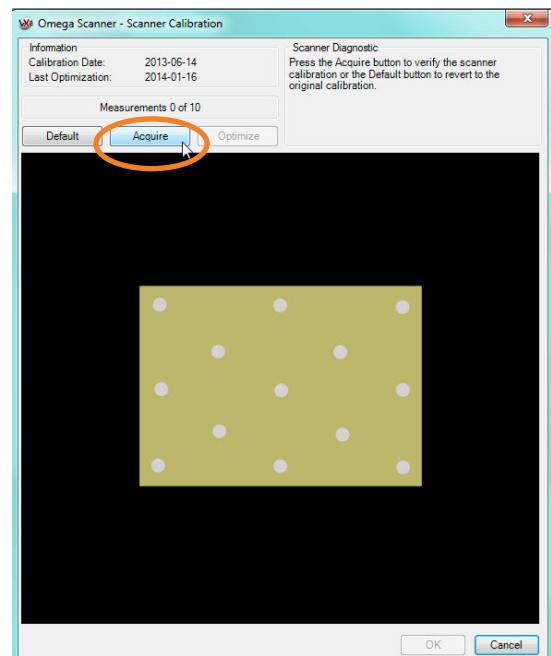

4. While holding the Scanner perpendicular to the calibration plate, point the Scanner at the center of the plate. Bring the Scanner closer or farther to the plate to position the white projection within the green square. Repeat for each of the required distances.

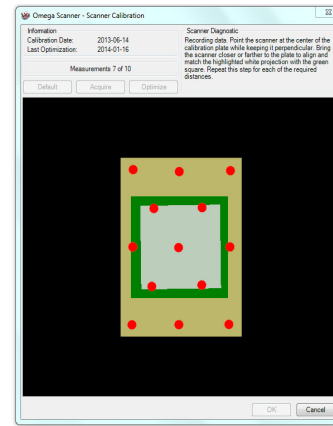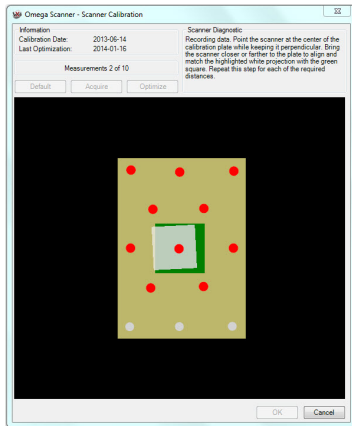

Tips:

- Make sure to hold the Scanner perpendicular to the plate.
- Move the Scanner at a steady and slow speed.
- Once the first position is matched, slowly move the Scanner straight up for the other 9 positions.



5. Once all 10 positions have been matched, press the **Optimize** button and follow the recommendations displayed in the **Scanner Diagnostic** area.

6. Click **OK** to finish.

If the calibration procedure fails, check the following:


- If there are any reflective objects near the calibration plate, remove the objects and repeat the calibration process.
- Verify that the targets on the calibration plate are in good condition. A single damaged or misplaced target will cause the calibration to fail.
- Click on the **Default** button to restore the factory setting, and repeat the calibration process.

If these steps fail, please contact WillowWood for assistance.

SCANNING

Before scanning the patient, apply reflective targets to any landmarks you wish to capture.


Note: targets cannot be applied on the edge of a surface to be scanned; there must be at least 1/2" between a target and the edge of the surface.

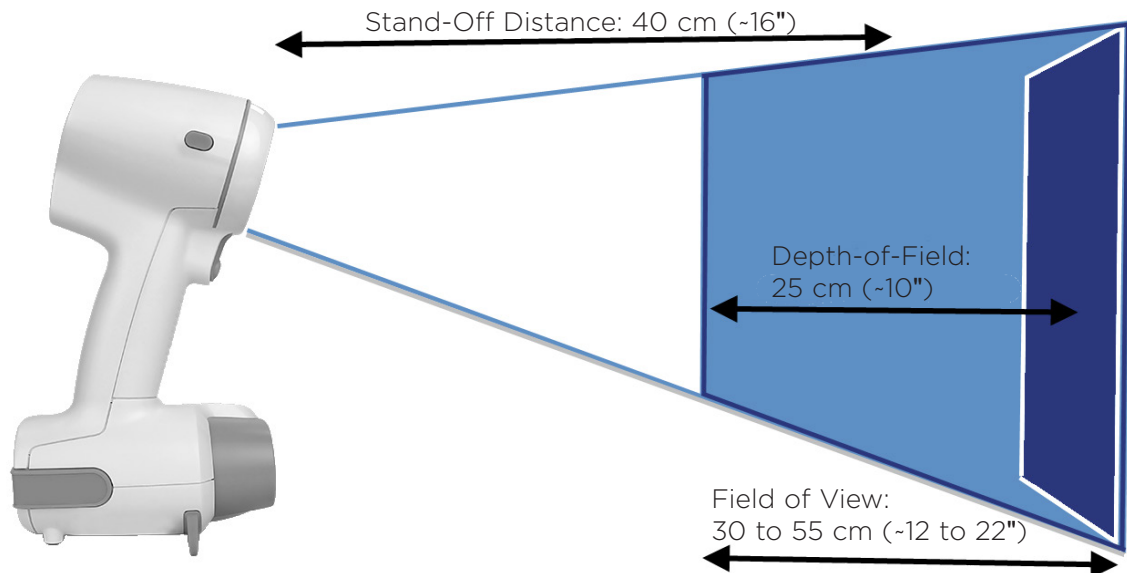

When you are prompted by the software to scan the model:

- Hold the Scanner approximately 15" from the patient's body
- Aim the Scanner at an area of the surface that has the greatest amount of topographical detail.
- Press the trigger.

The Scanner's lights will help you to aim the Scanner correctly:

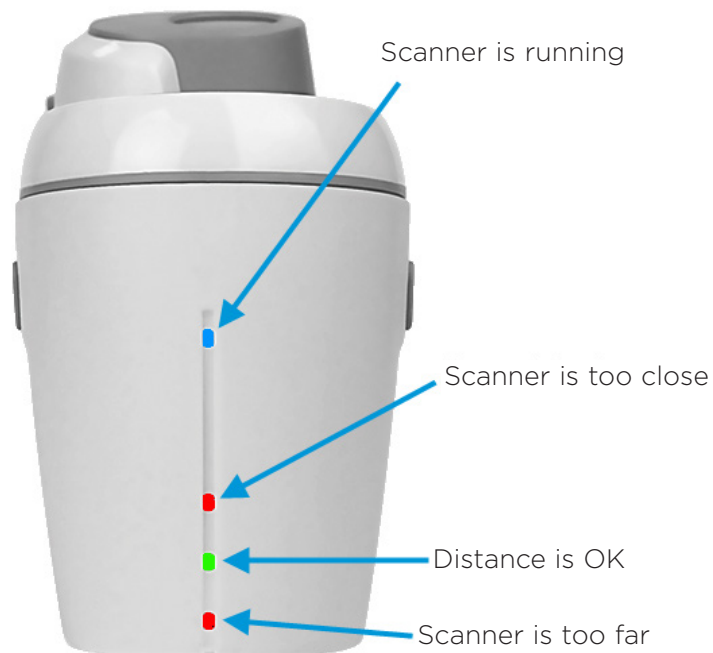

If you have difficulty getting the Scanner to "lock on" so that the green light is lit, you may need to apply more targets to the surface.

Once you have positioned the Scanner so that the green light is lit, move the Scanner around to follow the contours of the shape.

Helpful Tips:

- Hold the Scanner so that it is perpendicular to the surface being scanned.
- Keep your wrist locked, hold your elbow to the side of your body, and move the Scanner by moving your body.
- Attempting to scan a surface simply by flexing and extending your wrist (as if you were painting with a brush) will not be effective.
- Avoid scanning any parts of the body that are moving; for example, if a child's shoulders are moving during a cranial scan, avoid scanning the shoulders.
- You may release and press the trigger as often as desired; however, when you resume scanning, be sure to resume in an area that has already been captured before moving to an area that has not yet been captured.

As you scan, you will see the model being built on the computer screen. The model will be somewhat rough in appearance; you will see a smoother version as you advance through the software.

Release the trigger when you are done.

MAINTENANCE

General Maintenance

The OMEGA Scanner 3D contains optical precision parts and must be handled with care to avoid damaging its internal components or calibration system. It must be carried in its protective case at all times. The system must be stored in a dry and dust-free place and must be kept at room temperature.

While not being used, the scanner must be placed in its protective case.

Metal and Plastic Parts

1. Do not use solvent to clean the device.
2. Use a soft cotton cloth with a small amount of water or a soapy solution.

Optical Parts

Optical parts require very special attention to ensure optimal quality:

1. Spray dry air to remove any particles that may scratch the surface of the lenses and lights.
2. Clean the objectives and lights using a damp cloth like the non-abrasive optical towelette provided by Creaform or a microfiber cloth.
3. Wipe them with a clean and dry cloth, like a towelette or wipe.
4. Repeat steps 2 and 3 if necessary.

Calibration Plate

Do not touch the reflective targets on the calibration plate. If any of the targets get scratched or marked, the calibration plate should be replaced.

Dirty targets may be cleaned with very special care:

1. Use a soft clean cloth with denatured alcohol to gently dab the retro-reflective surface.
2. Do not use acetone or other solvent to avoid permanently damaging the targets.

TECHNICAL SPECIFICATIONS

Weight	850 g (1.9 lb)
Dimensions	96 x 140 x 258 mm (3.8 x 5.5 x 10.2 in)
Light Source	White light (LED)
Measurement Rate	550,000 measurements/second
Resolution	1 mm (0.04 in)
Accuracy	Up to 0.500 mm (0.02 in)
Volumetric Accuracy*	0.500 mm/m (0.02 in/ft)
Stand-Off Distance	400 mm (15.75 in)
Depth of Field (from stand-off distance)	250 mm (10 in)
Scanning Area	380 x 380 mm (15 x 15 in)
Connection Standard	USB 2.0

**With reflective targets or an object presenting sufficient geometry.*

WillowWood[®]

15441 Scioto Darby Road
Mt. Sterling, Ohio 43143 USA
Phone: 740.869.3377 or 800.848.4930
Fax: 740.869.4374
www.willowwoodco.com



Ohio Willow Wood Company B.V.
Keizersgracht 62/64
1015 CS Amsterdam
The Netherlands

